INTEGRATION GUIDE

AMAZON ALEXA INTEGRATION for TAHOMA® SWITCH



INTEGRATION GUIDE

AMAZON ALEXA INTEGRATION for TAHOMA® SWITCH

VERSION 1.1 | OCTOBER 2024 | Prepared by PROJECT SERVICES

TABLE OF CONTENTS

I. INTRODUCTION ---------- 3

II. OVERVIEW ---------- 4

RESOURCES & APPLICATIONS

SYSTEM REQUIREMENTS

III. INSTALLATION ---------- 5

BUTTONS & INDICATORS

IV. SYSTEM PREPARATION ---------- 7

SOMFY SYSTEM

AMAZON ALEXA SYSTEM

V. SET UP ---------- 7

ENABLE THE TAHOMA SKILL

LINK TAHOMA TO ALEXA

DISABLE THE TAHOMA SKILL

I. INTRODUCTION

The Somfy Organization's strength has been demonstrated with 50 years of experience in motorization. As leaders in the shading industry with innovative and modern solutions for homes and commercial buildings, Somfy offers the widest range of strong, quiet motors and controls for all types of applications and technologies.

Who is this Guide for?

This guide is aimed at providing support and guidance to homeowners, installers, and dealers for achieving complete automation of Zigbee® and Radio Technology Somfy® (RTS) motors with the TaHoma® switch.

What does this Guide contain?

The sections of this guide contain walkthroughs and methods of controlling Zigbee and RTS devices using the TaHoma® switch(es) as the bridge between Amazon Alexa and Smart Shading by Somfy.

For questions or assistance please contact technical support:
(800) 22-SOMFY (76639)
Get answers to your questions from our Somfy FAQ page: www.somfysystems.com/en-us/support/faq
Follow the steps to access Service & Support.

How should this Guide be used?

This guide is intended to be used as a reference manual.

II. OVERVIEW

The Somfy TaHoma® switch provides a single platform for Somfy Zigbee and RTS with a wide range of interior and exterior applications.

- The TaHoma system supports up to 60 Zigbee motors (max. 50 WireFree), 10 smart plugs, 15 remotes, and 40 channels of RTS
- Join up to 10 TaHoma switch hubs for multi-zone control (RTS only)
- The TaHoma system supports a maximum of 40 scenes with schedules per install

Each TaHoma switch is connected to Wi-Fi or directly to the local area network by an optional Ethernet adaptor for IP Integration with third-party control systems. TaHoma is compatible with the Somfy Synergy™ API.

Details of this controller and commissioning instructions are available in the Somfy TaHoma pro Dealer Version Programming Guide.

RESOURCES & APPLICATIONS

Visit www.somfypro.com for the following guides:

- Somfy TaHoma pro Dealer Version Programming Guide
- Somfy RTS Pocket Programming Guide

Subscribe to the Somfy YouTube Channel www.youtube.com/somfysystems

Visit Somfy U for all the training you need — your pace, your place www.somfyu.com

Visit the Google Play or iOS App Store for the TaHoma by Somfy app:

SCAN ME

Visit the Google Play or iOS App Store for the Amazon Alexa app:

Google Play Store

iOS App Store

SYSTEM REQUIREMENTS

The TaHoma app is compatible with the following operating systems and software versions:

iOS Version: 15.0 or later

Android Version: 8.0 and up

III. INSTALLATION

BUTTONS & INDICATORS

TaHoma® switch #1871037
TaHoma® switch (with ethernet adaptor) #1871038

TOP LED BEHAVIOR:

BLUE
WI-FI SETTING PROCESS

WHITE
WI-FI SEARCH – 2 TIMES
WI-FI LOST – 1 TIME

RED
SCENE STOPPED - SOLID
CONNECTION OUTAGE - BLINKING

OFF
STANDING BY

AMBER
RESTARTING

GREEN
TAHOMA PRO MODE

Scene 1 Button
Control customized scene 1

Stop Button
Stop scene underway

Scene 2 Button
Control customized scene 2



BOTTOM LED BEHAVIOR:

WHITE
POWERED,
CONNECTED TO CLOUD SERVER – SOLID
(CAN BE DEACTIVATED)

RED
POWERED,
NOT CONNECTED TO CLOUD SERVER - SOLID

OFF
NOT POWERED

Micro USB Port
Connect power or Ethernet Adaptor



Reset Button
PRESS & HOLD to reset TaHoma switch

TaHoma® Ethernet Adaptor #9028054
(Sold Separately or included with #1871038)
Connect for a wired local area network connection

Micro USB
Connect to TaHoma® switch for power and Ethernet



Ethernet Port
Connect to network router or switch

Micro USB Port
Connect power through Ethernet Adaptor

LED BEHAVIOR:

GREEN
ETHERNET CONNECTION


AMBER
DATA TRANSFER

Plug-in Power Supply Required
(Included with TaHoma® switch)
Connect to line-voltage to power TaHoma switch

Power Supply
Plug-in Transformer to line-voltage outlet

Micro USB
Connect power to TaHoma switch

Standard USB
Connect cable to Transformer

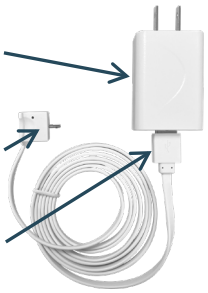

Ysia 1 & 5 Zigbee Remotes
Ensure the remote is powered.
Pressing any button will illuminate the LED(s).
Status LED will blink RED if the battery level is not sufficient for programming.
NOTE: Check the charge of the batteries in the remote

Ysia 1 Zigbee #1871153
Ysia 5 Zigbee #1871154

Status LED Indicator
Commands and Zigbee network activity

UP Button

MY/STOP Button

DOWN Button

Channel LED Indicator
Show channel selected

Channel Selection Button
To select channel


Programming Button
To pair and reset products



BUTTONS & INDICATORS


WAKING THE MOTOR:
Ensure the motor has required power available.
Using a small paper clip or similar, BRIEFLY PRESS the Programming Button on the head of the motor
OR
PLUG IN the battery supply/charger.
The motor will jog (briefly move up and down), and the LED will illuminate GREEN for 2 seconds.
The LED will blink AMBER continuously during programming.

DRAPERY MOTOR

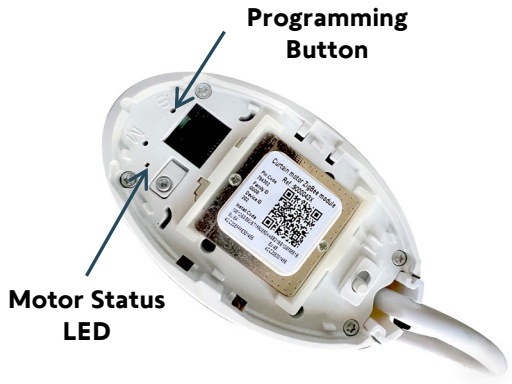

Smart Plug Zigbee #1871217

Ensure the Smart Plug is plugged into a properly powered outlet.
QR Code and power button are on opposite sides of the plug.

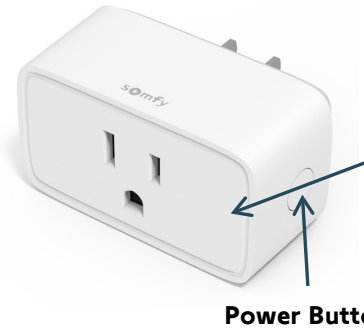

LED BEHAVIOR:


RED
SOLID 3s– NOT CONNECTED
POWERED – OUTPUT OFF

AMBER / GREEN
FLASHING – PAIRING MODE

GREEN
SOLID 3s – CONNECTED
POWERED – OUTPUT ON

OFF
NOT PAIRED
NOT POWERED

ROLLER MOTORS

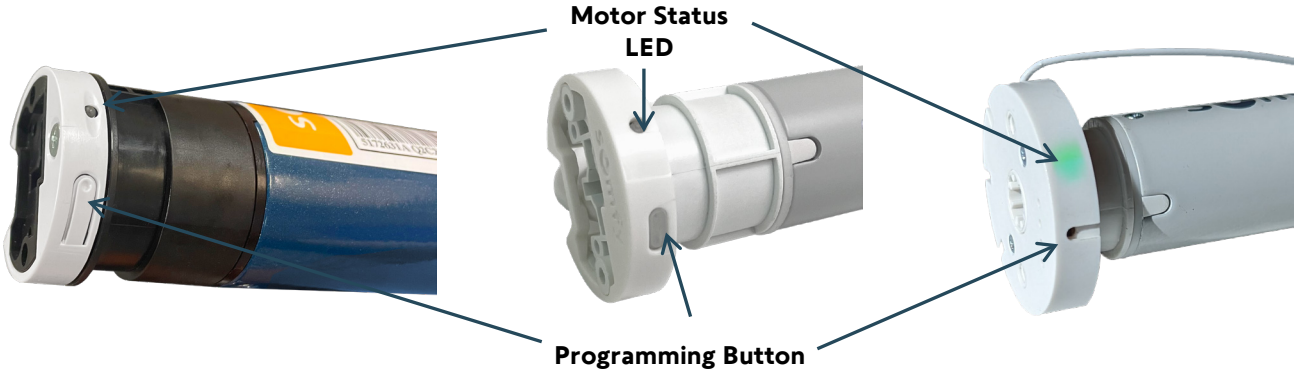

Sonesse® 40 120V AC Zigbee shown above

Sonesse® 30 24V DC Zigbee shown above

Sonesse® 30 ULTRA WireFree Li-Ion Zigbee shown above (Same for Sonesse® WireFree™ motors)

MOTOR STATUS LED BEHAVIOR:


AMBER
MOTOR IS NOT SET
IN SETTING MODE
IN ADJUSTMENT MODE

GREEN
MOTOR IS CHARGING
CONFIRMED SETTING


RED
LOW BATTERY CHARGE
THERMAL PROTECTION
IMPOSSIBLE SETTING

NOT ILLUMINATED ONCE
PAIRED AND OPERATIONAL

TILT MOTOR

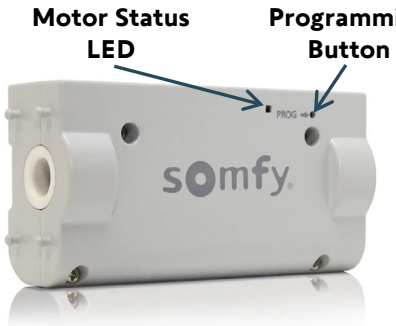

CORD LIFT MOTOR

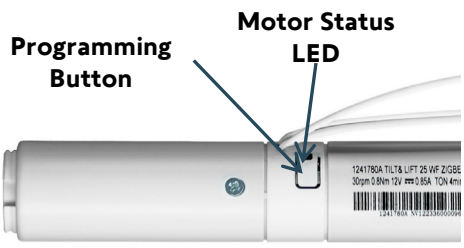

IV. SYSTEM PREPARATION

SOMFY SYSTEM

A fully operational TaHoma system is required prior to Alexa programming. The TaHoma system supports up to 60 Zigbee motors (max. 50 WireFree), 10 smart plugs, 15 remotes, and 40 channels of RTS.
RTS devices programmed to an RTS channel will only receive commands from the associated TaHoma switch hub.
Hubs must be placed within 25-35' of the devices they control.

- Confirm with Shade Commissioning Agent that the TaHoma switch firmware is up to date
- Must have one Amazon account per TaHoma system or project

AMAZON ALEXA SYSTEM

A fully operational Amazon Alexa system is required prior to TaHoma integration.


- Confirm that Amazon Alexa is powered on and connected to a network with internet
- Confirm Amazon Alexa IOS/Android application is up to date

V. SET UP


ENABLE THE TAHOMA SKILL

To enable the TaHoma by Somfy skill in Amazon Alexa, follow the steps below.
From the Amazon Alexa app, ensure the correct account is enabled prior to using the skill.
When creating and naming groups in Alexa, refrain from using the same name as the shades.

1) DOWNLOAD & INSTALL the Amazon Alexa app
2) SIGN IN with an Amazon account email address and password
3) FOLLOW the on-screen instructions
4) SELECT the 3-lines button *NOTE: This is on the bottom-center of the screen*
5) SELECT "Skills & Games"
6) ENTER "TaHoma by Somfy" or "Somfy" in the Search field, then SELECT "Search"
7) SELECT the "TaHoma By Somfy" Skill
8) SELECT "ENABLE TO USE"

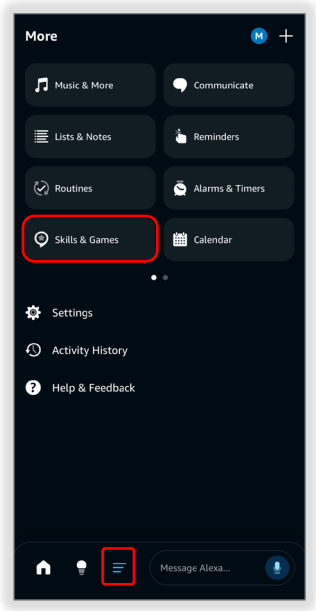




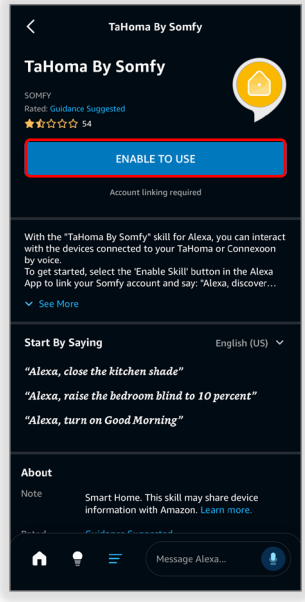



LINK TAHOMA TO ALEXA

To link TaHoma to Amazon Alexa, follow the steps below.

1) ENTER the TaHoma account login credentials used to register the TaHoma
2) SELECT "LOG IN"
3) SELECT "YES" to authorize Alexa to access the Somfy account
4) WAIT for the account linking process to complete

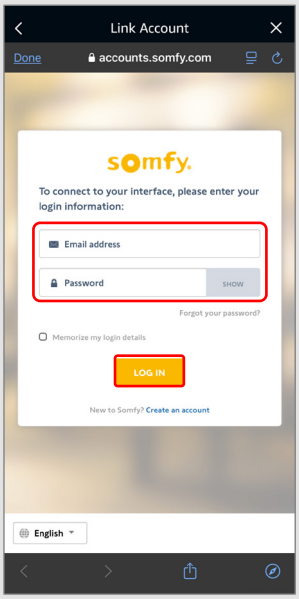

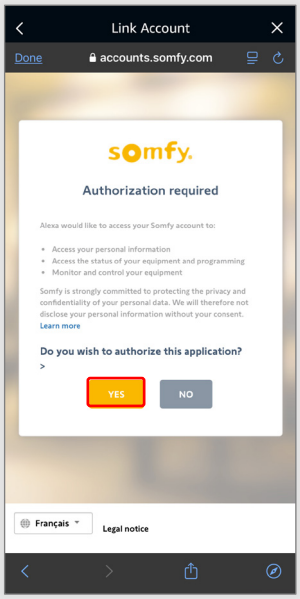

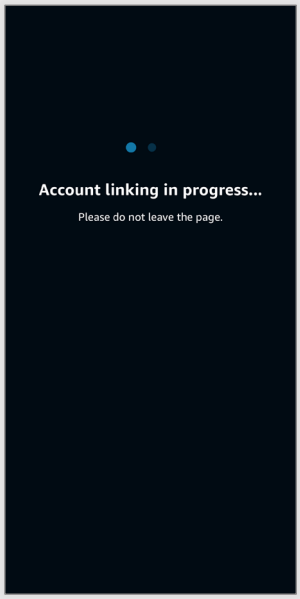

DISABLE THE TAHOMA SKILL


To disable the TaHoma by Somfy skill in Amazon Alexa, follow the steps below.


1) SELECT the 3-lines button
   NOTE: This is on the bottom-center of the screen
2) SELECT "Skills & Games"
3) ENTER "TaHoma by Somfy" or "Somfy" in the Search field, then SELECT "Search"


   OR


   SELECT "Your Skills"
4) SELECT the "TaHoma By Somfy" Skill
5) SELECT "DISABLE SKILL"

   Disabling the TaHoma by Somfy skill will unlink the TaHoma and Alexa accounts. The discovered devices will no longer operate and will need to be deleted in the Alexa app.
6) SELECT "Disable"

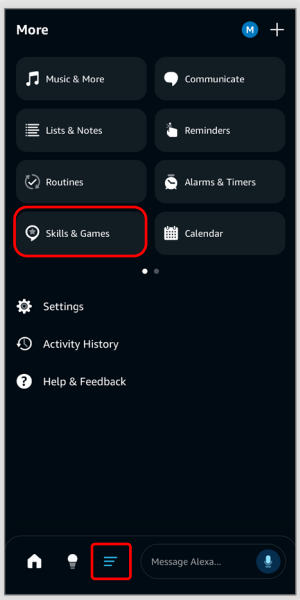

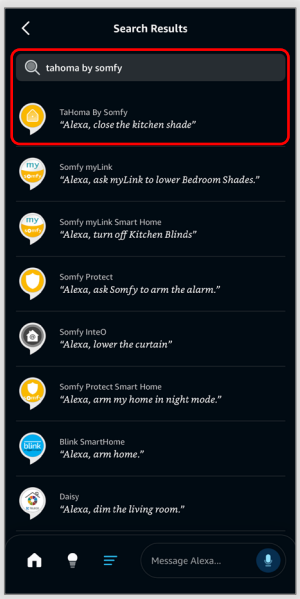

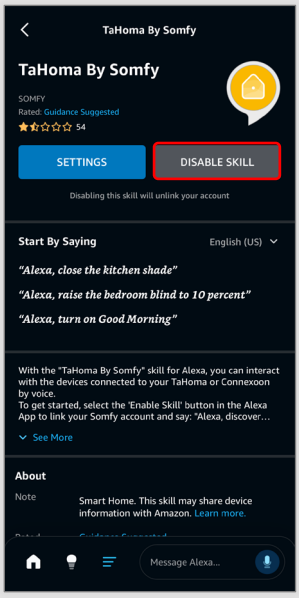

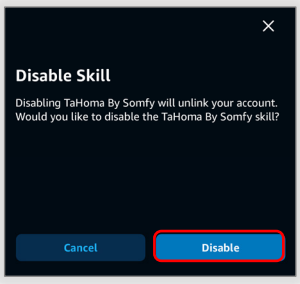

FOR QUESTIONS OR ASSISTANCE PLEASE CONTACT TECHNICAL SUPPORT:

(800) 22-SOMFY (76639)

Get answers to your questions from our Somfy FAQ page: www.somfysystems.com/en-us/support/faq

Follow the steps to access Service & Support.

© Somfy Systems, Inc. • **OCTOBER 2024**

All brands, products, and trademarks are the property of their respective owners.

About Somfy®

For over 50 years, Somfy has been pioneering innovative motorization and automated solutions for window coverings and exterior shading products. With comfort, ease of use, security, and sustainability in mind, our seamless and connected solutions are designed to help people make the move to living spaces impactful for humans and with a reduced impact on nature.

A BRAND OF SOMFY GROUP

Somfy Systems, Inc.
T: (800) 22-SOMFY
www.somfypro.com

New Jersey
121 Herrod Blvd.
Dayton, NJ 08810
T: (609) 395-1300
F: (609) 395-1776

Florida
1200 SW 35th Ave.
Boynton Beach, FL 33426
T: (561) 995-0335
F: (561) 995-7502

California
15301 Barranca Pkwy.
Irvine, CA 92618-2201
T: (949) 727-3510
F: (949) 727-3775

Somfy ULC
T: (800) 66-SOMFY
www.somfypro.ca

Canada
6411 Edwards Blvd.
Mississauga, ON L5T 2P7
T: (905) 564-6446
F: (905) 238-1491