USB-C Li-ion External Battery Pack Instructions

Item #: 9028930

Included:

A. 1 Battery Pack
B. (1 Pair) of Wall/Ceiling mounting brackets
C. (1 Pair) of Headrail mounting brackets
D. (1 Pair) of screws and mounting anchors

A.



B.

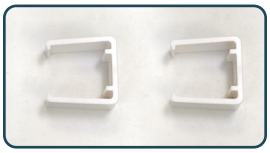

C.



D.





USB-C Li-ion Fast Charger (With Cable) Sold Separately #9028923

- Battery should be charged completely prior to installation.
- Follow all recharging instructions.
- <2 hours for 80% of the capacity.

1 Two Mounting Methods

Determine if the battery pack should be mounted to the wall, ceiling, or below the headrail and use the appropriate mounting brackets. Only one style clip is needed depending on mounting preference.



A. With a wall/ceiling bracket

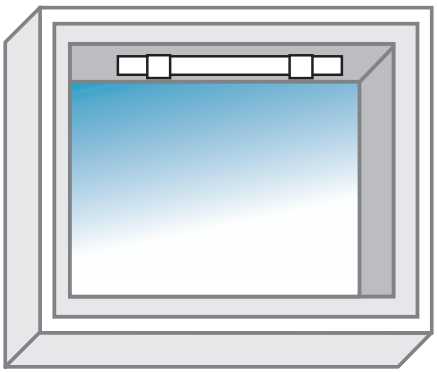

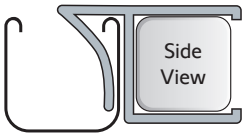

B. With a headrail mounting bracket

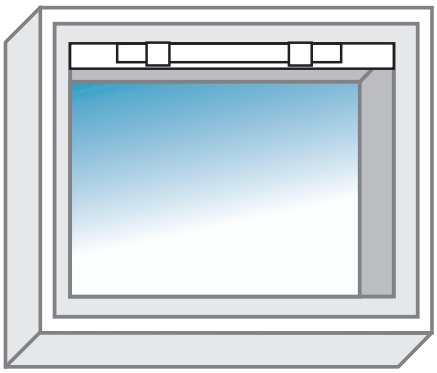





CONTINUED ON NEXT PAGE

2 Charging

Note:
The LED on the motorized shade will blink **RED** when the battery requires charging.

Fig. 1



Accessories:
USB-C Magnetic Rigid Cable #9028563
USB-C Magnetic Adaptor #9028564

STEP 1
Plug the USB-C into the battery pack to recharge, or use the rigid cable and magnetic adaptor to recharge.

If not accessible, remove the battery pack from the brackets.



STEP 2
Plug the charger into an electrical outlet. The LED indicator on the plug will flash **GREEN** during charging.



STEP 3
When the LED indicator on the charger is solid **GREEN**, the battery is fully charged. Disconnect the battery from charger.



STEP 4
If the battery pack was removed from the brackets for charging, reinstall it into the mounting brackets.

Reconnect the battery pack cable to the motor cable.



Note:
Ensure all cords do not interfere with the movement of the window covering. Be certain the motor antenna is exposed for optimal wireless operation.





CONTINUED ON NEXT PAGE

3 Troubleshooting

Observation	Possible Causes	Solution
Window covering moves after a delay and motor LED blinks **RED** 2 times	Battery is low on power	Recharge battery
Motor LED is solid **RED**	Battery is critical	Recharge battery
Charger LED is flashing **GREEN**	Charging in progress	Wait for solid **GREEN**
Charger LED is solid **GREEN**	Battery is fully charged	Unplug battery from charger

WARNING

- Improper use can lead to overheating, fire, or explosion, possibly causing injury or death.
- Only use correct Somfy plug-in charger for your battery pack (see above ref #9028923).
- Explosion risk if battery is damaged, exposed to heat, or low air pressure.
- Do not recharge the battery during routine maintenance work (e.g. cleaning windows).
- Do not damage battery (drop, alter, or forcibly open), expose to high temperatures (≥140°F or 60°C), flame, or moisture.
- Product intended for indoor use only.
- Keep batteries (new and used) out of the reach of children.
- Damaged products should be properly discarded or recycled.
- Intended use with Somfy external battery wirefree motors only (refer to the motor instructions for programming).
- Use only Somfy recommended replacement batteries and parts.



BATTERY RECYCLING OR DISPOSAL

Discard batteries and electrical components following local codes or regulations. Recycle batteries and electrical components with designated electronic recycle centers.

© Somfy Systems, Inc. • **JANUARY 2026**
All brands, products, and trademarks are the property of their respective owners.