DIGITAL KEYPAD

DESCRIPTION

The Somfy Digital Keypad is a programmable indoor or outdoor security switch for rolling shutters, doors and grilles. SOMFY's easy to install and simple to use Digital Keypad is the perfect "KEYLESS" solution and a convenient control for motorized rolling shutters and grilles. Designed for security conscious customers, the Digital Keypad features a personal code number to help prevent unwarranted access to their premises. The private entry code can be changed by the end user to ensure limited access or protection should a compromise of security occur.



OPERATING AND PROGRAMMING INSTRUCTIONS

IGC

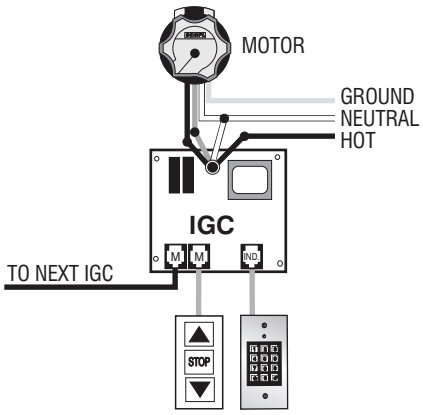

The IGC Outdoor Digital Keypad comes factory programmed with codes for UP, DOWN, and STOP. When the UP code is entered, the keypad will command the IGC to raise the shutter or grille. Similarly, the shutter or grille will lower when the DOWN code is entered.

To keep secure access, the codes can be reprogrammed by following these steps:

KEYPAD ENTRY	FUNCTION
*382436#	Enter programming mode
*193#	Set code length to 3 digits
*11UUU#3#	UUU is the UP code (enter desired digits)
*11SSS#34#	SSS is the STOP code
*11DDD#4#	DDD is the DOWN code
*2301#	Set output pulse width
*2401#	
*99#	Exit programming mode

SINGLE MOTOR REMOTE

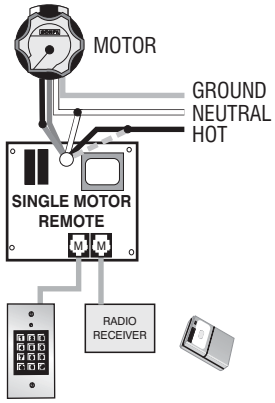

The Digital Keypad for Remote Control comes programmed with a single security code. Every time the code is entered, the Remote Control will sequence through UP, STOP, DOWN, STOP.

Follow these steps to change the security code:

1. Locate the code bank on the decoder module. It has 17 socket positions (*, 0, 1, 2, 3, 4, 5, 6, 7, 8, 9, #) which are printed on the circuit board.
2. Socket positions A B C D E represent the five possible digits of the operating code. Socket position A is the first digit, while E is the last digit of the code.
3. Place one end of a program jumper wire (preinstalled) in socket A and the other end in the desired first digit. Repeat this process for B, C, D, and E. **NOTE:** You may not use the same number twice in the operating code.
4. Attach the decoder to the keypad. Locate the 13 position socket marked **S2** on the decoder board. Align socket S2 with the 13 positions on the keyboard and carefully press the socket onto the pins.

ORDERING INFORMATION

Description	Catalog Number	Description	Catalog Number
Outdoor Digital Key Pad for IGC	6300849	Indoor Digital Key Pad for Remote Control	6300739
IGC Controller	6300717	Outdoor Digital Key Pad for Remote Control	6300740
2 Gang Electrical Box	5670323	Remote Controller	6300690